

# TENMARS

## TACHO Meter TM- 4100 / TM- 4100D



User's  
Manual



HB2TM4100004

TENMARS ELECTRONICS CO., LTD



# ***Table of Contents***


1	Foreword .....	3
2	Features: .....	3
3	Identifying Parts .....	5
4	LCD Description .....	6
5	Specifications .....	7
6	Measurement Procedures and Preparation.....	11
6.1	Battery Loading: .....	13
6.2	Power Button : .....	13
6.3	Data Hold /Backlight Button: .....	13
6.4	Units Button:.....	14
6.5	MAX/MIN Button: .....	15
6.6	RESET/CLR Button: .....	15
6.7	AVG and Ring call ON/OFF Button : .....	15
6.8	Manual Data Memory Storing .....	16
6.9	Viewing Data Record .....	17
6.10	DEL data memory (TM4100) .....	17
7	Setup Mode.....	18
7.1	St1 Automatic Power On/off: .....	19
7.2	St2 Auto Power off Time Setting: .....	19

7.3	St3 Record Interval Time Setup .....	20
7.4	St4 Screen Backlight ON / OFF Setting Note: .....	21
7.5	St5 Backlight off Time to Select the Setting .....	22
7.6	St6 Buzzer Sound ON / OFF Note .....	22
7.7	St7 ft. / m Unit Conversion Options: .....	23
8	Battery replacement .....	24
9	Safety Precaution .....	25
10	Safety Information .....	26
11	End of life .....	27


## 1 Foreword

Thank you for purchasing this tachometer. Please, read this user's manual before you operate it.

## 2 Features:

- Measurement method : Using red visible spectrum light source and reflective tape or a reflector plate.
- Reflex indicators : When you receive the reflected signals the RING bright LCD screen locked and buzzer.
- Features : Max / Min display, display hold, on average, automatic shutdown, buzzer, backlight.
- Contact measurement and non-contact, non-contact measuring the distance from the 50 ~ 500mm, allowing in this way would be dangerous to use the case of the measured object. Light weight, make the instrument easier to handle.
- Low battery detector “”.
- Manual data memory storing : 300 data

(Tm-4100D memory storing : 20000 data)


- Connect the USB Cable :  
The Screen Display "USB" (Stop the Auto Power Off function).
- With AC/DC power supply :  
The Screen Display "ADP" (Stop the Auto Power Off function).
- Installation of Contact : The Screen Display "".
- Reflected red light signal received :  
The Screen Display "RING".


## 3 Identifying Parts



1. Speed the Sensor.
2. Liquid-crystal LCD.
3. MAX / MIN Button.
4. Hold / Backlight Button.
5. Power Button.
6. REC/ MEM / Button.
7. UNIT Button.
8. RESET/CLR Button.
9. AVG/Buzzer/ Right
10. fixed tripod screw hole
11. Battery covers.
12. Contact adapter mounting nut.
13. Contact adapter.
14. Fixed screws
15. Contact type X0.1M
16. Contact-type shoulder
17. Power Supply DC 9V
18. USB Connector
19. Analog /pulse output port

## 4 LCD Description

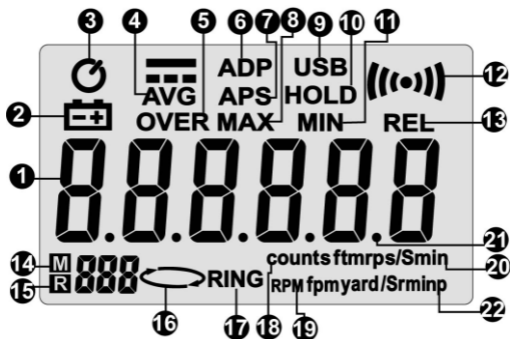

- |  |  |
|--|--|
| 1. Primary Display.                                  | 12. Buzzer symbol  |
| 2. Low battery symbol.                               | 13. REL symbol.  |
| 3. Auto power off .symbol                            | 14. M – Memory reading symbol  |
| 4. AVG symbol  | 15. R - REC symbol   |
| 5. OVER symbol                                       | 16.  - Contactsymbol. |
| 6. ADP symbol  | 17. RING symbol.   |
| 7. APS: Analog /pulse output port connector indicate | 18. counts unit  |
| 8. MAX symbol  | 19. r/min RPM unit   |
| 9. USB symbol  | 20. ms r/s m/min unit  |
| 10. Hold symbol                                      | 21. Decimal point  |
| 11. Min symbol                                       | 22. m/ s m/min yard /s yard / min unit   |



## 5 Specifications

- Measurement method : Using red visible spectrum light source and reflective tape or a reflective plate.
- Display : Liquid-crystal (LCD), 6 digits
- Range switching : Automatic.
- Contactless measurement detection range : 50mm to 500mm (1.97" to 19.7")
- Sampling period : 62.5 ms to 2 s (depending on usage conditions).
- Measuring range :
  - Measuring range (non-contact, AVG = ON)  
[r/s] ( 0.5000~1.9999 ) ~ ( 200.0~1600.0 )  
[ms] ( 0.6000~1.9999 ) ~ ( 200.0~1999.9 ) .
  - Measuring range (contact, AVG = ON)  
[m/m] ( 1.500~19.999 ) ~ ( 200.0~1999.9 )  
[ms] ( 0.0250~1.9999 ) ~ ( 20.00~33.30 )
- Only speed measurement :  
precision required for the above plus  $\pm 0.5\%$ rdg.
- Display refresh rate : Approx. 0.5 to 10 times/sec.
- Functions : MAX/MIN display, Display hold, Average, Auto power save, Buzzer, Backlight function.
- Operating temperature humidity range:  
0°C to + 40°C. 25% to 75 % RH.

- Storage temperatures humidity range :  
-10°C to +60°C. 0% to 80% RH.
- Power supply : 9V alkaline battery×1.
- AC Adapter : 9V(1A) (Option).
- Maximum rated power : 0.5VA.
- Compatible jack diameter : 3.5mm.
- Output Level : 0 to 3.3V.  
(Active low, low level fixed at 300  $\mu$  s) .
- Instrument output setting (analog output/pulse output).
- Continuous operating time : Approx. 24 hours (TM4100) .
- Dimensions : Approx. 186x70 x36 mm  
( L x W x H ) .
- Mass : Approx. 200g.
- Accessories : 9V alkaline battery ×1, Carrying case ×1, REFLECTIVE TAPE X1 sheet per piece).
- Ranges and measurement ranges:

**NOTE 1** : the lowermost digit is fixed at 0 at speeds of 20,000 r/min and over.

**NOTE 2** : the lowermost digit is fixed at 0 when the averaging setting is off.

## Rotational speed measurement:

Ranges and measurement range

Note 1 : The lowermost digit is fixed at 0 at speeds of 20,000r/min and over.

Note 2 : The lowermost digit is fixed at 0 when the averaging setting is off.

### (1) Rotational speed measurement

MODE	AVG=ON/OFF	Contact measurement	Accuracy
Rotation speed measurement (r/m)	AVG=ON	30.00 to 99990	$\pm 0.5\% \pm 20\text{dgt.}$
	AVG=OFF	300.0 to 99990	$\pm 0.5\% \pm 100\text{dgt}$
Rotational speed measurement (r/s)	AVG=ON	0.5000 to 1600.0	$\pm 0.5\% \pm 10\text{dgt.}$
	AVG=OFF	5.000 to 1600.0	$\pm 0.5\% \pm 20\text{dgt.}$
Period Measurement(ms)	AVG=ON	0.6000 to 1999.9	$\pm 0.5\% \pm 10\text{dgt.}$
	AVG=OFF	0.6000 to 199.90	$\pm 0.5\% \pm 20\text{dgt.}$
Count Measurement(count)	AVG=ON	max 9999dgt.	$\pm 0.5\% \pm 1\text{dgt.}$
	AVG=OFF		$\pm 0.5\% \pm 10\text{dgt.}$
	AVG=ON	10000 to 19999	$\pm 0.5\% \pm 2\text{dgt.}$
	AVG=OFF		$\pm 0.5\% \pm 20\text{dgt.}$
	AVG=ON	20000 to 999999 (r/min)	$\pm 0.5\% \pm 20\text{dgt.}$
	AVG=OFF		$\pm 0.5\% \pm 100\text{dgt.}$


### (2) Circumferential speed measurement

MODE	AVG=ON/OFF	Contact measurement	Accuracy
Circumferential measurement (m/min)	AVG=ON	1.500 to 1999.9	$\pm 0.5\% \pm 20$ dgt.
	AVG=OFF	15.00 to 1999.0	$\pm 0.5\% \pm 100$ dgt
Circumferential measurement (m/s)	AVG=ON	0.0250 to 33.30	$\pm 0.5\% \pm 20$ dgt.
	AVG=OFF	0.2500 to 33.30	$\pm 0.5\% \pm 100$ dgt

## EMC

This meter was designed in accordance with EMC Standards in force and its compatibility has been tested in accordance with EN61326-1 (2006).

- Ac / The pulse output wiring diagram:

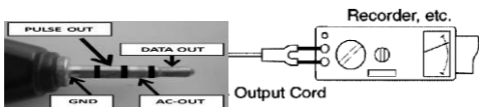


## **6 Measurement Procedures and Preparation**

Precautions in Measurement of High-Rotation Objects Detection of reflected light uses modulated light is input for a fixed period of time (about 0.2ms) or longer, a single pulse is detected. For this reason, if the light pulse generated by the passing reflective tape is less than 0.2ms detection is not possible.


The range that can be detected with a 12mm square target of reflective tape is indicated below.

※ Radius is the distance between the center of the rotating object and the center of the tape.

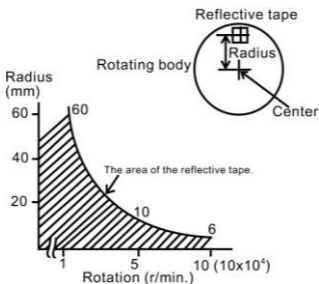


### Chapter Measurement Procedures

If the reflective tape cannot be attached within this detection range, increase the area of the reflective tape so that the generated pulse is 0.2ms to higher.

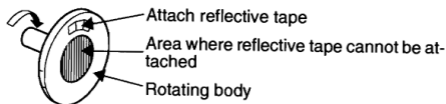

For measurement of 30,000r/min. or higher, uses the following method:

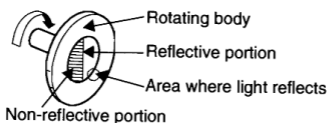

For measurement of 30,000 r/min. or higher, use

the following.


Method :


## Chapter Measurement Procedures

If the reflective tape cannot be attached within this detection range, increase the area of the reflective tape so that the generated pulse is 0.2ms to higher.

### 6.1 Battery Loading:

Remove the battery cover on the back and put a 9V battery inside.



Battery replacement: When the symbol of  appears on the LCD display, the battery should be replaced with a new one.

The battery symbol will be displayed on the LCD, this symbol  is a battery low indicator.

### 6.2 Power Button :

- Press  button to power on.
- Again Press  button to power off.

### 6.3 Data Hold /Backlight Button:

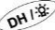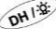Press the  button, LCD display **HOLD**, Lock reading, and then a  lifting "lock.



Press the “**DH / [light icon]**” button for more than 2 seconds to turn on or turn off the backlight function


- Backlight light turns off automatically after 30 seconds.


## 6.4 Units Button:


Press “**UNIT**” button to change the unit. Possible units:

Non-contact : **RPM r/min** → **ms.** → **counts** → **r/s**

Contact : **RPM**


**r/min** → **ms** → **counts** >> **ft/s** → **ft/min** → **yard/s** → **yard/min** → **r/s** 

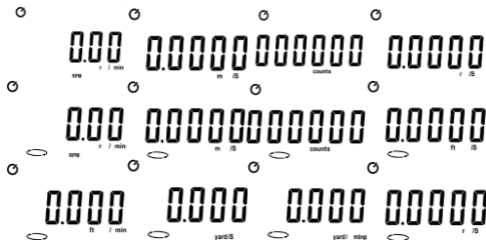

**RPM** : **r/min** → **ms** → **counts** → **m/s** → **m/min** → **r/s** 





## 6.5 MAX/MIN Button:


Configuration meshed : Repeated  key input Operation description :

Normal value → Maximum value (  lights up)  
→ Minimum value (  lights up)

※ This function is not available during count measurement (the key is disabled).



## 6.6 RESET/CLR Button:

Operation method :  key input

Operation description : The current value, maximum value, minimum value, count measured value, and circumferential speed value are reset to zero.

### Notes :

The measured value is also cleared when switching measurement modes and changing the averaging setting.

## 6.7 AVG and Ring call ON/OFF Button :




Operation method :  key input Operation

description:

The current value, maximum value, minimum value is reset to zero.


### Note:

The measured value is also cleared when switching measurement modes and changing the averaging setting.

Push “” button to enable or disable AVG mode. Press “” key more 2 seconds to enable or disable the buzzer. When the “” symbol is on the LCD Display which means the buzzer is on.









## 6.8 Manual Data Memory Storing

Push “” button, this meter will save the current measured result, and REC with a number 001~300 will appear.

Manual data memory Storing: 300 data sets. Over load Indication: “OL”.




## 6.9 Viewing Data Record


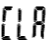

Press and hold “” first, and then press “” button together to enable record reading function, the LCD will display “M”, Press “” or “” button to read the next or previous records, Press and hold “” button first, and then press “” button together to disable the this function.




## 6.10 DEL data memory (TM4100)


Press and hold the “” button and press “” button to access the read data and clear mode:

The display shows “” in the lower left corner.



Press “” button, a blinking “” appears on the display, then press “” button to clear all


the records.


Press and hold “” button first, and then press

“” button together to disable the this function. °

## 7 Setup Mode

Press and hold “” button first ,and then press “” button to enter the Setup Mode set1.

Press “” button to change the setup function from set1 to set7 mode, LCD will display from set1 to set7.

Press “” button to exit the setup mode.

**Set 1:** Automatic shutdown on / off setting.

**Set 2:** Adjust auto-shutdown time setting.

**Set 3:** Record time: time. Points second set.

**Set 4:** Screen backlight on / off setting.




**Set 5:** backlight Seconds and setting

**Set 6:** Buzzer sounds on / off setting.

**Set 7:** ft. and m setting.

Setting method, see the 7.1 ~7.7 paragraphs.



## 7.1 St1 Automatic Power On/off:

After entering st1 screen then click "  " to switch from "On" to "off" then click "  " button to confirm the action, on behalf of not automatically shut down. Test mode LCD screen no longer displays "  " symbol. Will be appeared on the LCD display.



St1  
On

St1  
off



To reply to automatic shutdown feature, please follow the steps to cancel automatic shutdown st1, LCD screen, select the "On" symbol, then click "  " button to confirm the test status LCD screen on the "  " symbol to restore light, for automatic shutdown.

Press "  " key to save and exit.


## 7.2 St2 Auto Power off Time Setting:

After entering to St2 automatic shutdown time setting function, then the LCD screen will display


the time, st2, and symbols together to adjust minutes.

Press "  " button or "  " button to enter the value to adjust the duration of the auto power off time.

Setting Auto Power Off time from : 15 to 99 minutes.



Press "  " button and enter the settings from the setting mode.

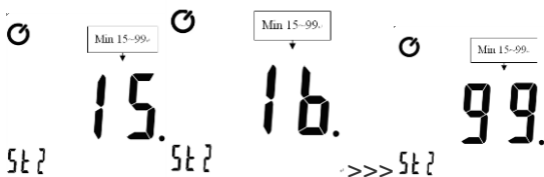

The auto power off time default setting is 15 minutes.




### 7.3 St3 Record Interval Time Setup

Entered into the records of each storage interval st3 time setting






By the press "  " button or "  " button to modify the time value of the duration.

Press "  " button or "  " button to shift the cursor to move from hour to minute, then to second for the setup.





Press "  " button to determine the set of the time, and from the setting mode.

## 7.4 St4 Screen Backlight ON / OFF Setting Note:


After entering st4 screen then click "  " and "  " to switch from "  " to "  " then click "  " button to

confirm the action, performed without backlight.



To reply to st4 backlight ON, please follow the steps to cancel without backlight unit, select the LCD screen on the "  " symbol, then click "


"  " button to confirm, on the implementation of a backlight.

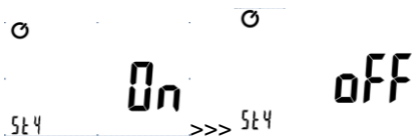
Auto Power off Time function






## 7.5 St5 Backlight off Time to Select the Setting

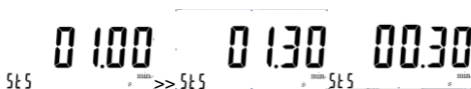After entering st6 screen then click "  " and "  " to switch converted to a 5.00>> 0.30>> 1.00>> 1.30>> 2.00>> 2.30>> 3.00>> 3.30>> 4.00>> 4.30>> 5.00 cycle




Select the time you want and then click "  " button to confirm

## 7.6 St6 Buzzer Sound ON / OFF Note

After entering st6 screen then click "  " and "  " to switch from "On" to "off" then click "  " button to confirm the action.



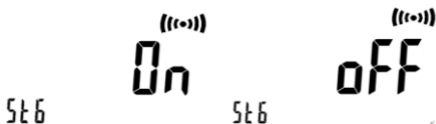


## 7.7 St7 ft. / m Unit Conversion Options:

Into the ST7 screen displayed on the "  $\text{E}$  " switch "

the screen displays "  $\text{E}$  " and "  $\text{b}$  " button for the conversion unit, the screen displays "  $\text{b}$  " "Press" "  $\text{b}$  " button to

confirm the selection unit.


Such as to be altered in accordance with the above instructions, and then operate a return to the original unit

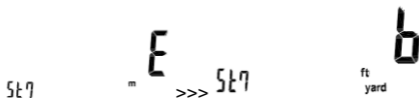

## 8 Battery replacement



### warning

If the symbol “  ” appears on the LCD, please replace the battery immediately

- Turn off the instrument.
- Remove the battery cover.
- Replace the battery.
- Install the battery cover.



※ Please take out the battery in case of using adapter.

## **9 Safety Precaution**

For cleaning the instrument use a soft dry cloth.

Never use a wet cloth, solvents or water, etc...

Operation Altitude : Up to 2000M.

Operating Environment : Indoors use.

This instrument has been designed for being used in an environment of pollution degree 2.

## 10 Safety Information



### **DANGER**

In some cases, work in the vicinity of powerful radiation sources can be a risk of your life.

Be aware that persons with electronic implants (e.g. cardiac pacemakers) are subject to particular dangers in some cases.

Observe the local safety regulations of the facility operation.

Observe the operating instructions for equipment, which is used to generate, conduct, or consumer electromagnetic energy.

Be aware that secondary radiators (e.g. reflective objects such as a metallic fence) can cause a local amplification of the field.

Be aware that the field strength in the near vicinity of radiators increases proportionally to the inverse cube of the distance. This means that enormous field strengths can result in the immediate vicinity of small radiation sources (e.g. leak in wave guides, inductive ovens)

Field strength measuring device can underrate pulsed signals. Particularly with radar signals, significant measurement errors can arise.

All field strength measuring devices have a limited specified frequency range. Fields with spectral components outside of this frequency range are generally incorrectly evaluated and tend to be underrated. Before using field strength measuring devices, you should thus be certain that all field components to be measured lie in the specified frequency range of the measuring device.

## 11 End of life

### Caution :



This symbol indicates that equipment and its accessories shall be subject to a separate collection and correct disposal



# TENMARS



## **Professional Electrical and Environment Test & Measurement Instruments:**

Battery Capacity ,Impedance Tester,  
TACHO Meter ,LED light meter ,Temperature &  
Humidity meter ,Infrared Thermometer ,Sound  
level meter ,Light meter ,EMF meter ,UV Light  
meter ,RF meter ,Hot wire Anemometer ,CO  
meter ,Anemometer ,Lan cable tester ,CO<sub>2</sub>  
meter ,Solar power meter ,Radiation meter,  
Clamp meter ,Multimeter ,Phase Rotation test,  
Digital Insulation tester.

**Our products of high quality are selling  
well all over the world**

**TENMARS ELECTRONICS CO., LTD**  
6F, 586, RUI GUANG ROAD, NEIHU,  
TAIPEI 114, TAIWAN.

E-mail : [service@tenmars.com](mailto:service@tenmars.com)  
Http : [//www.tenmars.com](http://www.tenmars.com)